



**Technical Service  
BULLETIN**

October 11, 2004

Title:

**AUTOMATIC DOOR LOCK (ADL)  
FUNCTION**

Models:

'05 – '06 Corolla & Matrix

REVISÉD  
PG006-04  
PRODUCT GENERAL INFORMATION

**TSB REVISION NOTICE:**

- August 4, 2005: 2006 model year has been added to Applicable Vehicles. Previous versions of this TSB should be discarded.

**Introduction** 2005 – 2006 model year Corolla and Matrix vehicles equipped with Automatic Transmission and Power Door Locks feature an Automatic Door Lock (ADL) function that locks all doors when the shift lever is moved from “P” to “D.” When the shift lever is returned to “P,” the door locks can be set to remain locked (Mode 1 or 4) or unlock automatically (Mode 3). Details on the ADL function and all available modes can be found in the Owner’s Manual.

To standardize the ADL function across all model lines, it should be initialized to automatically unlock when the shift lever is returned to “P” (Mode 3) during Pre-Delivery Service (PDS).

**NOTE:**

When the battery is disconnected, the ADL mode returns to the default setting (Mode 1). The following procedure must be used to set the ADL function to Mode 3 whenever the battery has been disconnected.

- Applicable Vehicles**
- 2005 – 2006 model year **Corolla** and **Matrix** vehicles equipped with **Automatic Transmission** and **Power Door Locks**.

**Warranty Information**


OP CODE	DESCRIPTION	TIME	OFF	T1	T2
N/A	Not Applicable to Warranty	–	–	–	–



**Automatic  
Door Lock  
Procedure**

Perform the following procedure to set the ADL function to Mode 3.

1. Set the interior light control dial to the door position.
2. Move the shift lever into the “P” position and close all doors.
3. Turn the ignition switch to the “ON” position.

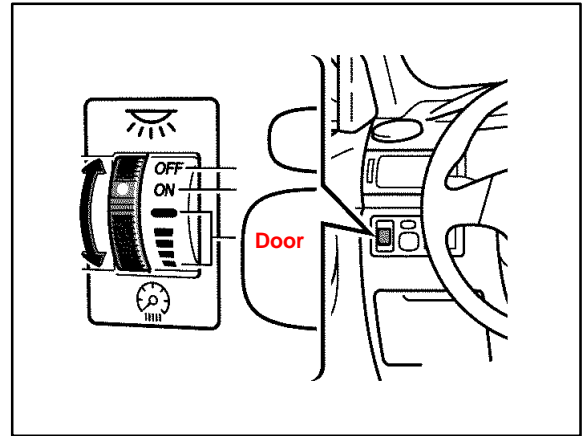

4. Within 5 seconds after the ignition switch is turned to the “ON” position, push and hold the front side of the door lock switch (lock position) for 5 seconds.

The interior light will flash to indicate the mode has changed.

5. Repeat procedure above from step 1 to 5 until the interior light flashes 3 times indicating that the ADL function has been set to Mode 3.

